



## **NRAQ.E318630 - PROGRAMMABLE CONTROLLERS**

**FILE NO.:** E318630

**UL CATEGORY (CCN):** NRAQ

**DOCUMENT TYPE:** Listing

**PARENT CATEGORY (CCN):** NIMX

## Programmable Controllers

**HOPE INDUSTRIAL SYSTEMS INC**

**E318630**

1325 NORTHMEADOW PKWY  
ROSWELL, GA 30076-3896 USA

**Accessories for use with HIS-UM Series for Suffix III, C only,** Model(s): *CP-BLNK-BLK, CP-CON-BL, CP-GL, CP-PG-BLK, CP-RG1-BLK, CP-RG2-BLK, CP-RG3-BLK, KVM2EXT-BLK-N4-PS2, KVM2EXT-BLK-N4-USB*

**Accessories for use with HIS-UM Series for Suffix III, C only,** Model(s): *KVM2EXT-BLK-N4* Accessories for use with HIS-WL Series for Suffix III, C only

**Accessories for use with HIS-WL Series for Suffix III, S only,** Model(s): *CP-BLNK-SS, CP-CON2-S, CP-CON-S, CP-PG-SS, CP-RG1-SS, CP-RG2-SS, CP-RG3-SS, KVM2EXT-SS-N4X, KVM2EXT-SS-N4X-PS2, KVM-SS-N4X-USB*

**Industrial monitors,** Model(s): *HIS-ML12- -F, -S or -C, HIS-ML15- -F, -S or -C, HIS-ML17- -F, -S or -C, HIS-ML19- -F, -S or -C, HIS-ML19.5- -F, -S or -C, HIS-ML20- -F, -S or -C, HIS-ML21- -F, -S or -C, HIS-ML22- -F, -S or -C, HIS-ML23- -F, -S or -C, HIS-ML23.8- -F, -S or -C, HIS-RL15-, HIS-RL17-, HIS-RL19-, HIS-RL19.5-, HIS-RM15-, HIS-RM17-, HIS-RM19-, HIS-RM19.5-, HIS-RM23-, HIS-UM15- followed by -S or -C, HIS-UM17- followed by -S or -C, HIS-UM19- followed by -S or -C, HIS-UM19.5- followed by -S or -C, HIS-UM22- followed by -S or -C, HIS-UM23- followed by -S or -C, HIS-UM23.8- followed by -S or -C, HIS-WL19.5- followed by S or C*

(a) - Followed by two alphanumeric, followed by A or B, or T followed by any alphanumeric.

(b) - Followed by two alphanumeric, followed by D or T, followed by any alphanumeric.