



# Installation Instructions

MOBL4X4-FIXD- \_\_ Series

## Floor Stand with Leveling Feet for Yoke and Pedestal Mount

1. Refer to Figure 1. Remove the nut from the location shown on each of the four legs.
2. Install each leg as shown in Figure 1.
3. Reinstall the nuts you removed in step 1 to secure each leg to the pedestal base.
4. Install the four leveling feet onto the underside of the legs of the mobile pedestal base.
5. Continue installation of the pedestal, monitor, and any other devices, following the installation instructions that shipped with those devices.

**NOTE: Powerful hose-directed water pointed at the pedestal base compromises the Type 12/4/4X seal of the monitor if cables are run through the pedestal. Consult Hope Industrial Systems if this is a potential issue.**

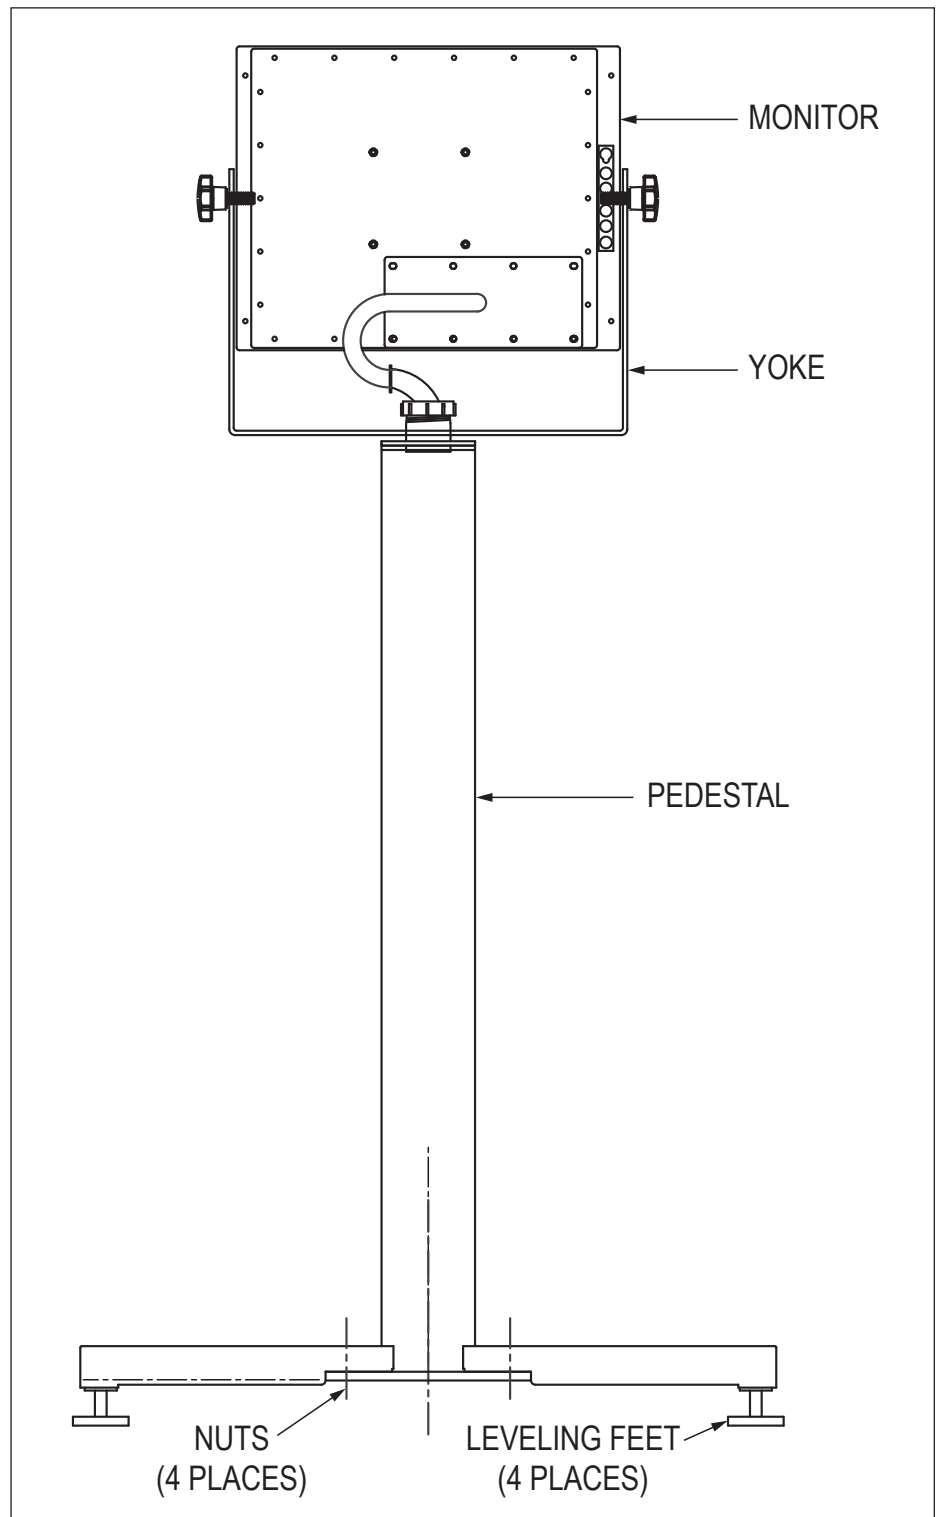


FIGURE 1 – ROLLING MOBILE PEDESTAL WORKSTATION